





LUMENS PS-550


### Setting Up the Document Camera

- 1) Pull up the center camera arm, adjusting position and height. Turn the camera so the lens faces down, toward the stage.
- 2) Press and slide the side latches to release the lamps. Pull up the lamp arms. Rotate the folded lamp to face down, toward the stage.

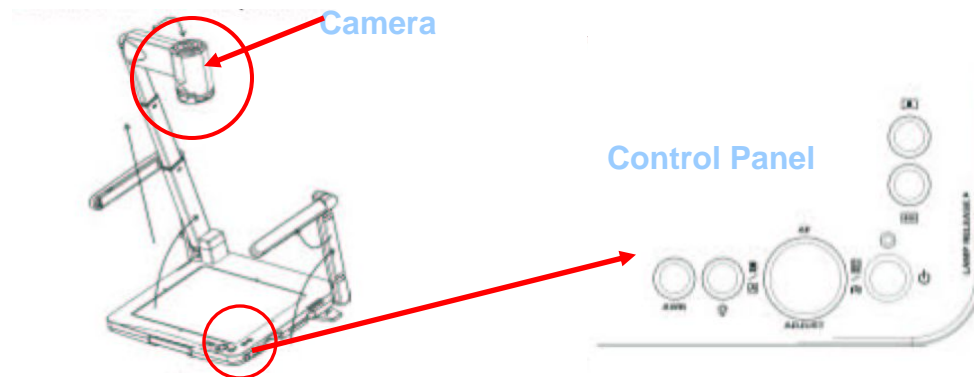



### Basic Operation using the Control Panel

**POWER** Press the Power button  for about 1 second to power on. The red LED (flashing until the presenter is started) turns to green.

**LAMP** Press button  to select desired LAMP setting.

- Upper lamps to be used for hardcopy documents, books, objects
- Base light to be used for clear transparencies

**ZOOM** to make the image appear larger or smaller.

Press the  (Zoom In) or  (Zoom Out) button on the control panel to make the image larger or smaller.

**AUTO FOCUS** The document camera will execute Auto Focus when changing materials or adjusting the zoom in/out. At any time, press the keypad "AF" for executing the AF function.